


□□□□

□□□□	SF5067
□□□□	3A
□□□□	$\leq 50\text{m}\Omega$
□□□□	$100\text{g} \pm 20\text{g}$
□□□□	1.0□□
□□	Ph, Ni □
□	□□□□□
□□	□□□□□
□□	□□□
□□ □□	OEM & ODM
□□□□	100PCS
□□	□□□□□□
□□	100% T/T □□□
□□□□	5-10 □ □□ □□□

□□ □□

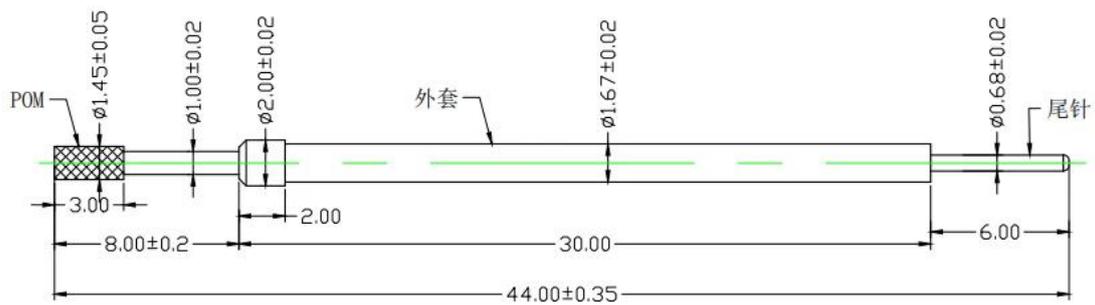

材质与弹力:

1. 外套: 黄铜镀金
2. 针头: 磷铜镀金
3. 尾针: 黄铜镀金
4. 弹簧: 不锈钢线

技术要求:

1. 额定电流: 3A
2. 额定电阻: $\leq 50\text{m}\Omega$
3. 开关距离: 1.0mm
4. 开关弹力: $100\text{g} \pm 20\text{g}$

□□ □□



1. raw material warehouse



2. Lathe workshop



3. Assemble workshop



4. Quality inspection




5. Finished products



6. Packing



Measuring Equipment >

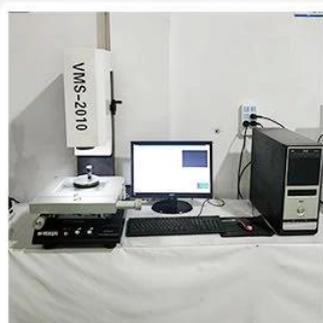

Measuring Equipment:

1. Agilent current testing;
2. Quadratic element measurement
3. Load Curve Meter
4. Bond Test
5. Life Fatigue Test



