




SFENG 1984 ( ) ( )




□□□□	SF-L106
MOQ	100
□□□□□□	□□□□□□□□□□7□□□




L106-J0.5

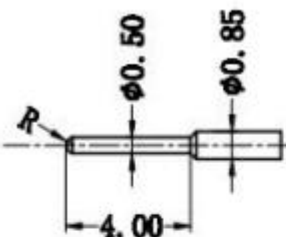


L106-J0.65

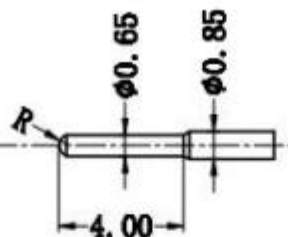


L106-J0.75

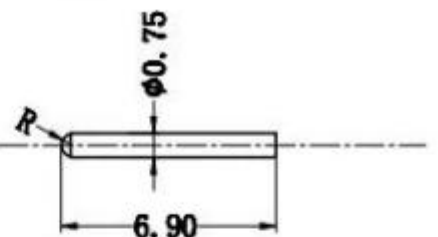


L106-H1.3

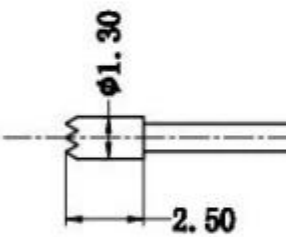


L106-B0.75

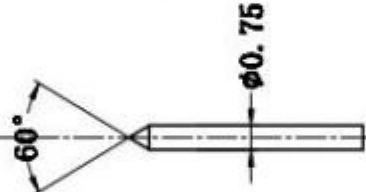


L106-B0.8

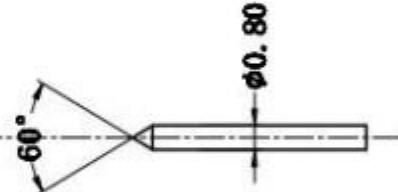


L106-H1.5

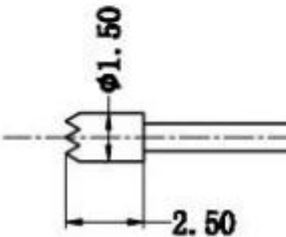


L106-E1.1

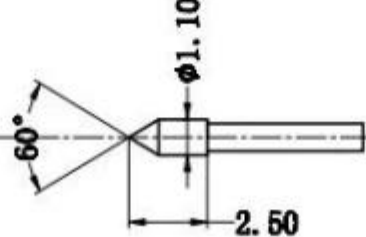


L106-E1.2

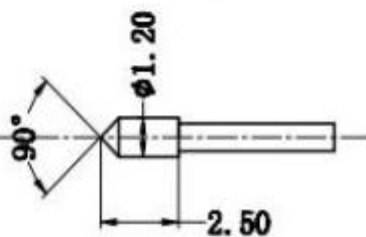

**L106-F1.3**

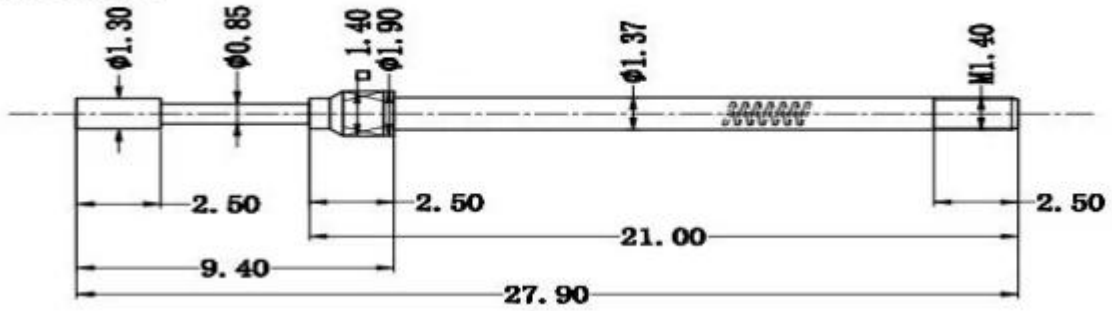

**L106-套管**

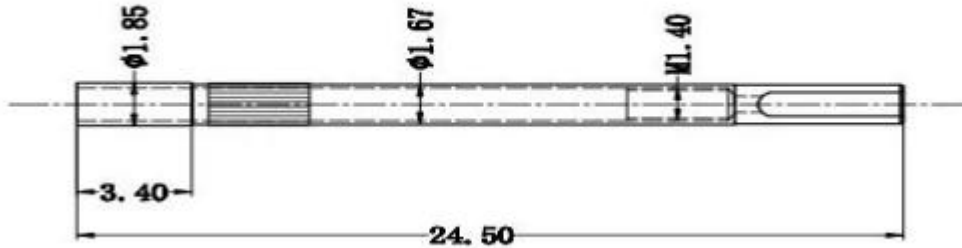

1. 24
2. OEM
- 3.
- 4.



1. PCB ICT FCT
2. 2
3. BGA
4. QZ VZ LM
- 5.
- 6.
7. 30# OK POM



1. Raw material warehouse



2. Lathe workshop



3. Assemble workshop




4. Quality inspection




5. Finished products



6. Packing

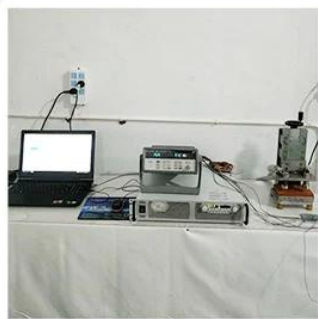

1. Agilent current testing

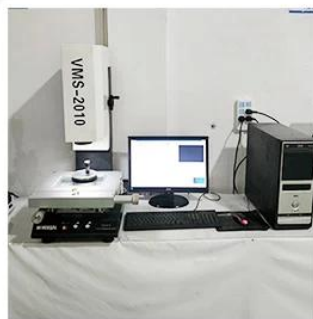

2. Quadratic element



3. Load Curve Meter



4. Bond Test



5. Life Fatigue Test



6. Microscope







A5:

Q6.

A6:

Q7.OEM ODM

A7: OEM/ODM

Q8.

A8: T/T L/C MOQ L/C