

PCB

00 00


SFENG



SFENG



SFENG

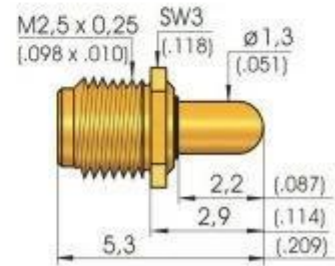

000	PCBA 000 0 000 000 00 0
00	50mil 75mil 100mil 00 000 00 0
00 00	0-50A
000 0	000
00 00	50m Ω

00 00



1. Raw material warehouse



2. Lathe workshop



3. Assemble workshop



4. Quality inspection




5. Finished products



6. Packing



1. Agilent current testing

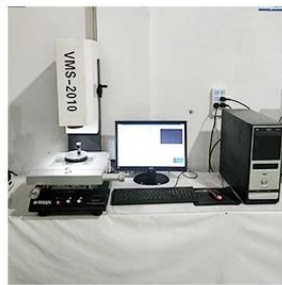

2. Quadratic element



3. Load Curve Meter



4. Bond Test



5. Life Fatigue Test



6. Microscope



Standard products will be delivered out within 3 days. Customized products will be sent out within 15 days.

