


□□ □□

□□ □□	SF5067
□□ □□	3A
□□ □□	$\leq 50\text{m}\Omega$
□□□□	$100\text{g}\pm 20\text{g}$
□□□ □□	1.0mm
□□□	Ph, Ni □□
□	□□, gold □□
□□ □	□□, gold □□
□	SUS
□□□ □□	OEM& ODM
MOQ	100PCS
□□□	Plastic bag, carton box
□□	□□ □ 100% T/T
□□ □□	□□□ □□ □ 5-10□

□□ □□

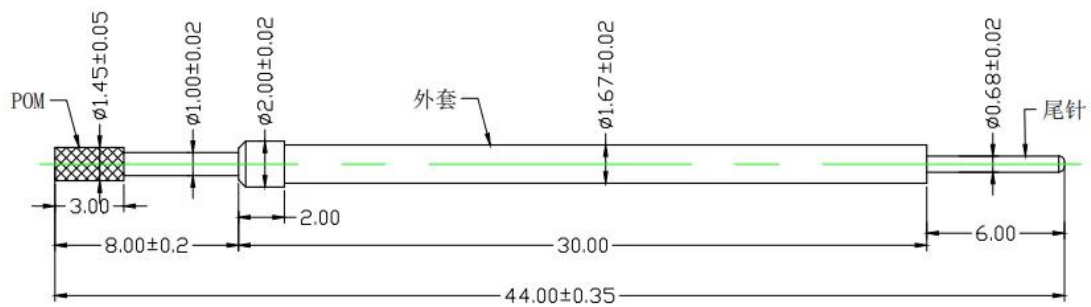

材质与弹力:

1. 外套: 黄铜镀金
2. 针头: 磷铜镀金
3. 尾针: 黄铜镀金
4. 弹簧: 不锈钢线

技术要求:

1. 额定电流: 3A
2. 额定电阻: $\leq 50\text{m}\Omega$
3. 开关距离: 1.0mm
4. 开关弹力: $100\text{g}\pm 20\text{g}$

□□ □□



1. raw material warehouse



2. Lathe workshop



3. Assemble workshop



4. Quality inspection



5. Finished products



6. Packing



Measuring Equipment >



Measuring Equipment:

1. Agilent current testing;
2. Quadratic element measurement
3. Load Curve Meter
4. Bond Test
5. Life Fatigue Test





□□ □□

1. PCB, ICT, FCTtesting □□ □□ □□ □□ □(□□);
 2. Pogo□(□□□) to 'setup' connection between two 'printed' circuit boards for 'charging, locating, locating, battery, semiconductor & interconnector' applications;
 3. 'BGA' □ '□□□' □□□□ □□ □□'□□□'
 4. Universal 'pin' without 'spring, coating 'pin, LM 'pin' with 'QZ' and 'VZ' series;
 5. □□□ □□□, □□□ □□□, □□□□□ □□;
 6. Terminal & receptacle/socket;
 7. □□ □□ □□ □□, □□□, POM □
- □□ □□□□ □□ □□ '□□□□' □□□ □□□ □□ □□□ '□□□□' □ □□□□□ □□ □□□ □□□□□□.

□□□ □□□

1. □□□ 24□□ □□ □□ □□□ □□□ □□□ □ □□□□.
2. Customized 'design' □ 'available' □□ 'OEM' □□□□□□.
3. □□□ □□□ □□□□ □ □□ □□□□ □□□ □□ □□□□.
4. □□□ □□□□ '□□□□' □□□□ '□□' □□□□ □□□ □ □□□□.