


□□ □□

□□ □□	SF7145
□□□□□	3.5mm
□□ □□□□	2.0mm
□□□ □	2000±20%
□□□ □□	0.5±0.2mm
□□□	Fe, Ni □□
□	□□, Ni □□
□□ □	□□, □ □□
□□□□ □□	OEM & ODM
MOQ	100PCS
□□□	Plastic bag, carton box
□□	□□ □ 100% T/T
□□ □□	□□□□ □□ □ 5~10□

□□ □□

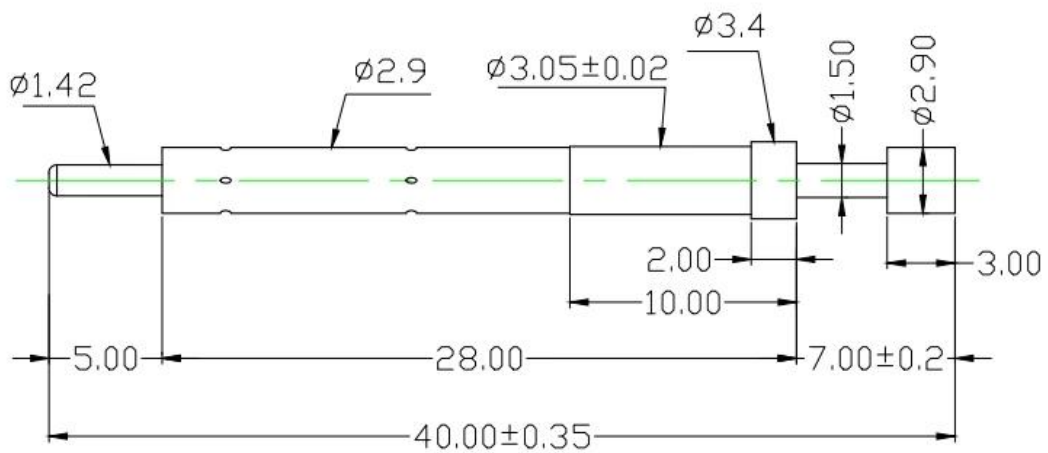

材质与电镀:

1. 针头: 易车铁镀镍
2. 针套: 黄铜镀镍
3. 尾针: 黄铜镀金

技术要求:

- 满行程: 3.5mm
- 额定行程: 2.0mm
- 额定弹力:  $2000 \pm 20\%$ g
- 开关距离:  $0.5 \pm 0.2$ mm

□□ □□



1. raw material warehouse



2. Lathe workshop



3. Assemble workshop



4. Quality inspection



5. Finished products



6. Packing



## Measuring Equipment >



### Measuring Equipment:

1. Agilent current testing;
2. Quadratic element measurement
3. Load Curve Meter
4. Bond Test
5. Life Fatigue Test





## □□ □□

1. PCB, ICT, FCT □□ □□ □□ □□ □□ (□□);
2. □□, □□ □□, □□□, □□□ □ □□□□ □□□□□□ □□ □ □□ □□ □□ □□ □□ □□□ □□ □□□□ □□ □□□□;
3. BGA □ □□ □□□□ □□ □□ □□ □□;
4. □□□□ □□ □□ □, □□ □, QZ □ VZ □□□□ □□ LM □;
5. □□□ □□□, □□□ □□□, □□□□□ □□;
6. □□□ □ □□□/□□;
7. □□ □□ □□ □□, □□ □□ □□, POM □ □.

□□□ □□□□ □□ □□ □□□□ □□ □□□□. □□□ □□□ □□ □□□ □□ □□□ □□□□ □□ □□□ □□ □□□ □□□.

## □□□ □□□

1. □□□ □□□ □□□ □□□□ 24□□ □□□ □□□ □□ □ □□□□.
2. □□□ □□□□ □□□□ OEM□ □□□□□.
3. □□□□ □ □□ □□□□ □□□ □□□□ □□□ □□ □□□□.
4. □□□□ □□□□ □□□□ □□□ □□ □□□□ □□□ □ □□□□.