□□□□

□□□□	SF3883
□□□	□□8.5×□□88.0mm
□□	□□□□□□:□ □□□:□□ □□□□□:SWP □□□:POM
□□□□□□□	18mm
□□□□□□□	12mm
□□□	1400±250gf@ □□ 12mm 2000±400gf@ □□ 18mm
MOQ	300□
□□□	T/T
□□	□□□□□□□□□□□ 5 □ 15 □

□□ □□□□□

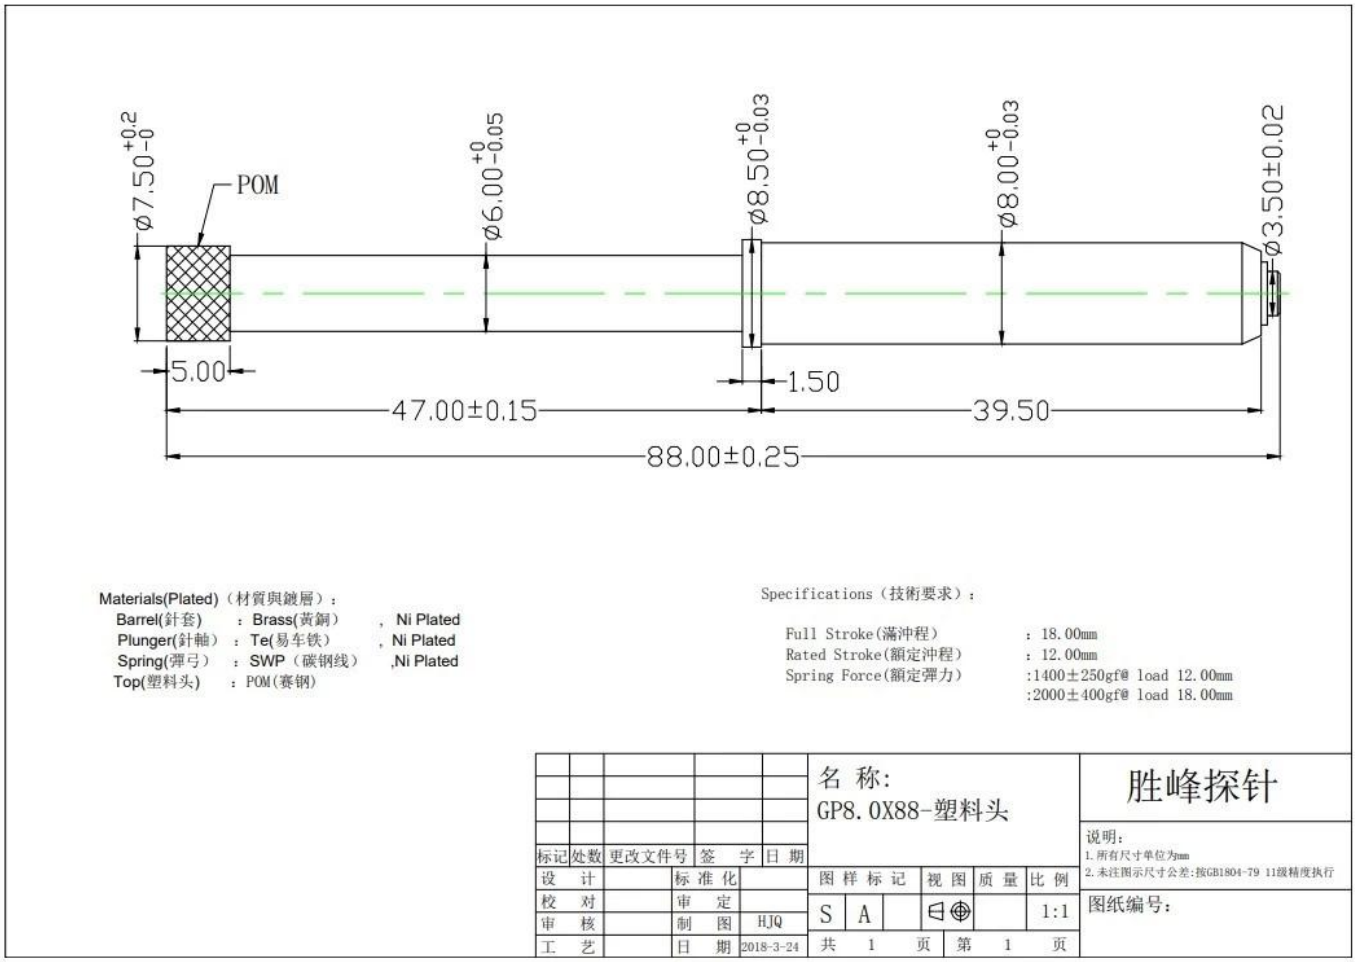

□□ □□

Production Flow (生产流程)

SFENG
The China's The World's

1. raw material warehouse

2. Lathe workshop

3. Assemble workshop

4. Quality inspection

5. Finished products

6. Packing

Measuring Equipment

Measuring Equipment:

1. Agilent current testing;
2. Quadratic element measurement
3. Load Curve Meter
4. Bond Test
5. Life Fatigue Test

□□ □□

1.PCB□ICT□FCT□□□□□□□□□□□□□□□□(□□□□);
2. □□□□ (□□□□) □□□□□□□□□□□□□□□□□